#### **Dell Latitude Xt Manual Pdf**

Front View

19
17
17
18
19
19
19
19
19
19
20
21
21
22
23
23 anisote fight execute levels Dout both 4. device status lights. COLL(D option only)
25 digital array exceptables 6. binarities framework of the control of t

File Name: Dell Latitude Xt Manual Pdf.pdf

**Size:** 2044 KB

Type: PDF, ePub, eBook

Category: Book

**Uploaded:** 6 May 2019, 23:48 PM **Rating:** 4.6/5 from 605 votes.

### **Status: AVAILABLE**

Last checked: 13 Minutes ago!

In order to read or download Dell Latitude Xt Manual Pdf ebook, you need to create a FREE account.

# **Download Now!**

eBook includes PDF, ePub and Kindle version

- ☐ Register a free 1 month Trial Account.
- ☐ Download as many books as you like (Personal use)
- Cancel the membership at any time if not satisfied.
- **☐ Join Over 80000 Happy Readers**

#### **Book Descriptions:**

We have made it easy for you to find a PDF Ebooks without any digging. And by having access to our ebooks online or by storing it on your computer, you have convenient answers with Dell Latitude Xt Manual Pdf . To get started finding Dell Latitude Xt Manual Pdf , you are right to find our website which has a comprehensive collection of manuals listed.

Our library is the biggest of these that have literally hundreds of thousands of different products represented.



### **Book Descriptions:**

# **Dell Latitude Xt Manual Pdf**

NOTICE A NOTICE indicates either potential damage to hardware or loss of data and tells you how to avoid the problem. Some features or media may not be available in certain countries. NOTE Additional information may ship with your TabletPC. What Are You Looking For.Readme files may be included on your media to provide lastminute updates about technical changes to your TabletNOTE You can also find your Service Tag information through the System Setup program. This support provides realtime health scans of your computing environment, software updates, and relevant selfsupport infThe Windows Notification area is. Please do not offer the downloaded file for sell only use it for personal usage. Looking for other manual For this no need registration. May be help you to repair. You could suffer a fatal electrical shock. Instead, contact your nearest service center. Note! To open downloaded files you need acrobat reader or similar pdf reader program. In addition, Also some files are djvu so you need djvu viewer to open them. These free programs can be found on this page needed progs If you use opera you have to disable opera turbo function to download file. If you cannot download this file, try it with CHROME or FIREFOX browser. Translate this page Relevant NOTEBOOKPC forum topics Dell laptop nem tolt Hellotok! Adott egy Dell gyartmanyu laptop, ami ha racsatlakoztatom a toltot , kiirja, hogy valoszinuleg az akkumulator nem toltodik, csatlakoztassa ujra a toltot. Illetve teszteket ajanl fel, amivel az akkumulatort lehet tesztelni. A tolto 3 polusu, tehat van egy kozepso tu, egy kulso kor es egy belso kor. A toltot mar kicsereltek egy HP toltovel, de ugyanazt a jelenseget produkalja. Talalkoztatok mar ilyen jelenseggel Az a jelenseg, hogy bekapcsol, beindulnak a ventilatorok, ugy tesz minha mukodne de nem ad kepet. A legfajdalommentessebb es amit olvasgattam rola a BIOS ujrairasa. Azt godoltam, hogy nem lesz gond de tevedtem.http://ecoledesgourmets.com/userfiles/infrant-nv+-manual.xml

• dell latitude xt3 manual pdf, dell latitude xt manual pdf, dell latitude xt manual pdf download, dell latitude xt manual pdf free, dell latitude xt manual pdf software, dell latitude xt manual pdf file.

Viszonylag konyen megtalaltam a filet de 8MB, ennek a lapnak a memoriaja viszont 4MB. A DELL honapjan megvan a 4 es a 8MBos valtozat is, de.exe formatumban amit nem tudok hasznalni. Ha valakinek megvan, legyen szives kuldje el. Sajnos nem vagyok egy zseni ezzel en tisztaban vagyok sokan vannak, akik lattak mar kondit, meg diodat annak hiszik magukat Csak hobbi szinten barkacsolok gyerek korom ota,ami meg most 39 eves koromra is megmaradt. Ezt azert irtam le mert a segito szandeku tagoktol szeretnek elore is elnezest kerni ha valamit elsore nem ertenek meg. Koszonom. A problemam amiben segitseget kerek,egy Dell D810 laptop. Az invertere nem mukodott,igy kaptam a keszuleket. Az inverter tapfeszultsegeit, magan az inverter panelon ellenoriztem, amikor az 5vos reszt mertem, a muszer csuccsal sajnos osszezartam a negativ resszel, es azota nem indul a lap. Tudja valaki esetleg hogy van e valami vedelem ami ilyenkor elszall, es koze van a lap inditasahoz Elore is koszonom. Dell latitude d620 PP18L laptop kijelzo nem ad kepet alaplapcserevel megoldva Udvozletem Mindenkinek! A fent nevezett laptop kulso monitorral uzemel, de a sajat kijelzojenek meg a vilagitasa sem megy. A komplett invrter panelt kicsereltem, de minden maradt a regiben. Esetleg lenne valakinek valami otlete a hiba mibenleteben. A segitseget elore is koszonom. You can write in English language into the forum not only in Hungarian. NOTICE A NOTICE indicates either potential damage to hardware or loss of data and tells you how to avoid the problem. All rights reserved. Reproduction in any manner whatso ev er without the written permissi on of Dell Inc. Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and nam es or their products. Dell Inc.

disc laims any proprietary interest in trademarks and trade names other than its own. Some features or media may not be available in certain countries. NOTE Additional information may ship with your Tablet

PC.http://heilfeuer.de/userfiles/infrared-blood-circulation-massager-model-lf11b-01-manual.xml

What Are Y ou Looking For. Find It Here book. book Page 14 Tues day, May 13, 2008 503 PM Find It Here book.book Page 16 Tues day, May 13, 2008 503 PM What Are Y ou Looking For. Find It Here book.book Page 17 Tues day, May 13, 2008 503 PM NSS is necess ary for corr ect operation of your Dell T abletPC. The software automatically detects yo ur T abletPC a nd operatin g system, and installs the updates appropriate for your configuration. NOTE The support.dell.com user interface may vary depending on your selections. What Are Y ou Looking For. Find It Here book.book Page 18 Tues day, May 13, 2008 503 PM Access the Dell Support Utility from the icon in the Windows Notification area. You can choose to have it appear every time you start your T abletPC, or turn it off. Find It Here book.book Page 19 Tues day, May 13, 2008 503 PM After you reinstall your operating system, use the Driver's and Utilities media to reinst all drivers for the devices that came with your T abletPC. NOTE The color of your media varies based on the operating sy stem you ordered. Find It Here book.book Page 20 Tues day, May 13, 2008 503 PM This checklist help's you to organi ze information Dell's support servic es will ne ed to troubleshoot your Ta b l e t P C. 4 Use Dells extensive suite of online s ervices available at Del l Support support.dell.com for help with installa tion and troubleshooting procedures. NOTE Call Dell Support from a telephone at or near the T abletPC so that the support staff can assist you with any necessary procedures. NOTE Dells Express Service Code sy stem may not be available in all countries. When prompted by Dells automa ted telephone system, enter your Express Service Code to route the call directly to the proper support personnel. If you do not have an Express Service Code, op en the Dell Accessories folder, doubleclick the Express Service Code icon, and follow the directions.

Dell Support Service NOTE Some of the following services are not always available in all locations outside the continental U.S. Call your local Dell representative for information on availability. book.book Page 21 Tues day, May 13, 2008 503 PM When you call AutoT ech, use your touchto ne telephone to select the subjects that correspond to your questions. Automated Order Status Service To check on the status of any Dell products you have ordered, you can go to support.dell.com, or you can call the au tomated order status servi ce. A recor ding prompts you for the information needed to locate and report on your order. Problems With Y our Order If you have a problem with your order, such as missing parts, wrong parts, or incorrect billing, contact Dell for custom er assistance. Have your invoice or packing slip handy when you call. You are responsible for paying shipping e xpenses. Y ou are also r esponsible for insuring any prod uct returned, and you assume the r isk of loss during s hipment to Dell. Collect On Delivery C.O.D. packages are not accepted. Returns that are missing any of the prec eding r equirements will be refused at Dell's receiving dock and returned to you. Before Y ou Call NOTE Have your Express Service Code ready when you call. The code helps Dell's automated support telephone system directly our call more efficiently. You may also be asked for your Service T ag located on the bottom of your T abletPC. If possible, turn on your T abletPC befor e you call Dell for assistance and call from a telephone at or near the T abletPC. You may be asked to type some commands at the keyboar d, relay detailed information during op erations, or try other troubleshooting steps possible only at the T abletPC itself. Ensure that the T abletPC documentation is available. CAUTION Before working inside your T abletPC, follow the safety instructions in your Product Information Guide. book.

## http://seasailing.us/node/5829

book Page 24 Tues day, May 13, 2008 503 PM Y es No Network, version, and network adapter Pr og r a m s a n d v e r si o n s See your operating system documentati on to determine the contents of the system's startup files. If the T abletPC is connected to a printer, print each file. Otherwise, recor

d the contents of each file before calling Dell. Error message, beep code, or diagnostic code Description of problem and troubleshooting procedures you perfor med book.book Page 25 Tues day, May 13, 2008 503 PM NOTE If you do not have an active Internet connection, you can find contact information on your purchase invoice, pack ing slip, bill, or Dell product catalog. Dell provides several onli ne and telephonebased support and service options. Availability varies by country and pr oduct, and some services may not be available in your ar ea. Front V iew 1 grip 2 display 3 ambient light sens or with Dualbulb CCFL LCD option only 4 device status lights 5 digital array microphone 6 biometric reader 2 3 13 1 4 12 9 11 6 7 10 15 16 17 18 14 5 8 book.book Page 27 Tues day, May 13, 2008 503 PM AMBIENT LIGHT SENSOR — Depending on the display option you chose when ordering your T ablet PC, your T ablet PC may or may not have an ambient light sensor. The ambient light sensor detects available e nvironmental light and automatically increases or decr eases the display backlighting to compensate for lowlight and high light environments. Turns on when the T abletPC reads or writes data. NOTICE T o avoid loss of data, never turn off the T abletPC while the light is flashing. Turns on steadily or blinks to indicate battery char ge status. T urns on when wireless devices ar e enabl ed. NOTE Bluetooth wireless technology is an optional feature on your T abletPC, so the icon turns on only if you ordered Bluetooth wireless technology with your T abletPC. For more information, see the documentation that came with your Bluetooth wireless device. book.

#### http://heidelberg-schloss.com/images/Cr250-Service-Manual-Pdf.pdf

book Page 29 Tues day, May 13, 2008 503 PM ROTATING HINGE — Rotate the hinge to transform the PC into tablet mode. If the T abletPC stops responding, pr e ss and hold the power butto n until the T abletPC turns off completely whi ch may take several seconds. The power button is surrounded by a backlit ring which is illuminated blue when you turn on the T ablet PC, and blinks when the T abletPC is in a power management mode. SCREEN ROTATE BUTTON — While the T abletPC is in tablet mode, you can use the screen rotate button to change the display orientation from portrait to landscape mode. E MAIL APPLICATION SHORTCUT BUTTON — Launches your email application.Ke v Combination Function Turns on when the numeric keypad is enabled. Located above the upper edge of the keyboar d. T urns on when the uppercase letter function is enabled. Located on the key. T urns on when the scroll lock funct ion is enabled. Located above the upper edge of the keyboar d. book.book Page 31 Tues day, May 13, 2008 503 PM PEN INDICATO R LED — Indicates pen status. EXTERNAL WIRELESS WAN ANTENNA — If your T abletPC supports wireless wide area network WW AN connectivity, you must extend and orient the external WW AN antenna for optimal signal str ength. 1 pen indicator LED 2 pen 3 external wireless W AN antenna NOTE The external antenna is provided with WW AN cards only and is not included in the standard computer configuration. The computer comes with a plug that you need to remove prior to installing the antenna and WW AN card. 4 IEEE 1394 connector 5 USB connector 6 air vent 7 speaker 46 7 5 3 2 1 book.book Page 32 Tues day, May 13, 2008 503 PM CAUTION Do not block, push objects into, or allow dust to acc umulate in the air vents. Do not store your T abletPC in a lowairflow environment, such as a closed briefcase, while it is running. Restrict ing the airflow can damage the T abletPC or cause a fire. The T abletPC turns on the fan when the T abletPC gets hot.

#### http://www.multicom-media.de/images/Cr250R-Manual-Download.pdf

Fan noise is normal and does not indicate a problem with the fan or the TabletPC. Connect FireW ire devices, such as a camera, external hard drive, or external CDROM drive. Supports hot swapping, multiple speeds on the same bus, and timebased data transfer. This provides bandwidth for multimedia operations. Connect USB devices, such as a mouse, k eyboard, or printer. book.book Page 33 Tues day, May 13, 2008 503 PM S ECURE D IGITAL SD CARD SLOT — Supports one Secure Digital memory card, a storage device used in portable devices such as digital cameras, handheld computers, PDAs, and GPS units. AUDIO CONNECTORS Connect USB devices, such as a

mouse, k eyboard, o r printer. Attach headphones to the connector. Attach a microphone to the connector. book.book Page 35 Tues day, May 13, 2008 503 PM Y ou can connect the AC adapter with your T abletPC turned either on or off. CAUTION The AC adapter works with electrical outlets worldwide. However, power connectors and power strips vary among countries. Using an incompatible cable or improperly connecting the cable to the power strip or electrical outlet may cause fire or equipment damage. NOTICE When you disc onnect the AC adapter cable from the T abletPC, grasp the connector, not the cable itself, and pull firmly but gently to avoid damaging the cable. When you wrap the AC adapter cable, ensure that yo u follow the angle of the connector on the AC adapter to avoid damaging the cable. Connects an AC adapter to the T abletPC. book.book Page 37 Tues day, May 13, 2008 503 PM SCROLL CONTROL BUTTON — Use to naviga te while in table et mode. NOTICE T o avoid damaging the T abletPC, do not plug a telephone line into the network connector or USB connectors. NETWORK CONNECTOR RJ45 POWERED USB CONNECTOR ROTATING HINGE — Converts T abletPC between notebook and tablet modes. PEN TETHER SLOT — Use to connect a tether between the T abletPC and the pen. Connects video devices, such as a monitor.

Connects video devices, such as a monitor. book.book Page 38 Tues day, May 13, 2008 503 PM T urns on when you turn on the T abletPC and blink s when the T abletPC is in a power management mode. book.book Page 39 Tues day, May 13, 2008 503 PM Do not store your T abletPC in a lowairflow environment, such as a closed briefcase, while it is running. DOCKING DEVICE CONNECTOR — Lets you attach your T abletPC to a media base or battery slice. Pen V iew 1 rightclick pen button 2 erase pen button 3 pen tether slots 3 1 2 book.book Page 41 Tues day, May 13, 2008 503 PM T o transfer data over a serial connection, you must access the Network Connections utility from the Control P anel and perform additional configuration steps, such as setting up an advanced connection and designating the host computer and the guest computer. This information may not be available in certain countries. book.book Page 51 Tues day, May 13, 2008 503 PM Y ou can use the Operating Sy stem media if available for this process or you can crea te a wizard disk with the Files and Settings Transfer Wizard. Running the Files and Settings Transfer Wizard With the Operating Sy stem Media NOTE This procedure requires the Operating Sy stem media. This media is optional and may not be included with certain computers. Do not click Next at this time. After the information has been copied, the Completing the Collection Phase screen appears. 7 Click Fi n i s h. T o transfer data to the new computer book.book Page 52 Tues day, May 13, 2008 503 PM The wizard r eads the collected files and settings and applies them to your new computer. When all of the settings and files have been applied, the F inished screen appears. 3 Click F inished and restart the new computer.

Running the Files and Settings T rans fer Wizard Without the Operating Sy stem Media T o run the F iles and Settings T ransfer W izard without the Operating System media, you must create a wizard disk that will allow you to create a backup image file to removable media. After the information has been copied, the Completing the Collection Phase screen appears. 8 Click Fi n i s h. T o transfer data to the new computer 1 On the Now go to your old computer screen on the new computer, click Next. 2 On the Where are the files a nd settings. F ollow the instructions on the screen. The wizard r eads the collected files and settings and applies them to your new computer. Using Notebook Mode Y our T abletPC can be used either in notebook mode or ta blet m ode. T o us e your T abletPC in notebook mode, open the display until it reaches a comfortable viewing angle, and use the k eyboard and di splay as you would those of any other notebook computer. book.book Page 54 Tues day, May 13, 2008 503 PM Y our T abletPC converts from notebook mode to tablet mode with a 180 degree clockwise twist of the display 's rotating hinge. Converting Y our T abletPC Between Note book and T ablet Modes T o convert your T abletPC to tablet mode NOTICE Forcing the hinge beyond the 180 degree point will damage your T abletPC. book.book Page 55 Tues day, May 13, 2008 503 PM T o convert your T abletPC from tablet m ode to notebook mode NOTICE Forcing the hinge beyond the

180degree point will damage your T abletPC. NOTICE Ensure that the display assembly does not scrape the keycaps as you rotate the display, or you may cause damage to your keyboard. 1 Lift the display until it reaches a 90 degree angle, perpendicular to the base. book.book Page 57 Tues day, May 13, 2008 503 PM Right and Le fthanded Use Y our T abletPC can be adjusted for eith er right or lefth anded use. Y ou 1 display assembly 2 rotating hinge 3 directional arrow on grip 3 2 1 book.

book Page 59 Tues day, May 13, 2008 503 PM Using T ablet Buttons Y our T abletPC has four tablet butto ns located beside the power but ton. book.book Page 62 Tues day, May 13, 2008 503 PM T o ac cess QuickSet, click the QuickSet icon in the Notification area, or pr ess the QuickSet tablet settings button. If you are using your T abletPC in tablet mode, you can press the W indows security button to access the Win do w s Ta s k M a n a g e r dialog box or a login screen, the same way you use the key combination in notebook mode. The computer will not recognize input until you press and hold the scr een rotate b utton a second time, or use the pen to wake the T abletPC. This feature provides a convenient way to prevent inadvertent input while carrying your T abletPC. P ress this button to view and configure options for the T abletPC and the pen through Dell QuickSet. Y ou can configure this button using T ablet PC Settings W indows Vis ta o r Ta b l e t S e t t i n g s W indows XP. Launches either Microsoft Outlook or Outlook Express if you have one of these applications installed on your T abletPC. You can configure this button using Tablet P C Settings W indows Vista or Ta b l e t S e t t i n g s W indows XP. book.book Page 64 Tues day, May 13, 2008 503 PM Using the Pen Ejecting and Storing the Pen P ress and r elease the pen to eject it from the pen compartment. To protect the pen when you are not using it, insert the pen, tip first, into the pen compartment on the T abletPC. P ress to engage the pen in its compartment. When you remove the pen from the pen compartment, the pen indicator LED blinks quickly to indicate that the pen has been r emoved. 1 pen indicator LED 2 pen compartment 3 pen 3 1 2 book.book Page 65 Tues day, May 13, 2008 503 PM Replacing the Pen T ip Y our T abletPC ships with several of each of two types of pen tips hard simulates the feel of a ballpoint pen and soft simulates the feel of a felttip pen.

To replace a pen tip 1 Use the pentip remover tool to grasp the pen tip, then firmly pull the tip from the pen. 1 pen 2 erase pen button 3 rightclick pen button 4 pen tip 5 pentip remover tool 1 3 4 5 2 book.book Page 66 Tues day, May 13, 2008 503 PM Calibrating the Pen The pen can function at the default cali bration or at a calibration set by you or by another user. Dell recommends that you use the pen only while it is calibrated to your person al calibration settings. Calibration optimizes pen performance for each user. T ap the pen in the exact center of each of the calibration markers. NOTE Be sure to calibrate the pen for us e in both portrait and landscape display orientations. Using the Pen Like a Mouse Y ou can use the pen with your T ablet PC the same way you use a mouse or touch pad with a notebook computer. When you hold the pen near the display, you see a small cursor. When you hold down the ri ghtclick pen button, the cursor is surrounded with a circle. book.book Page 67 Tues day, May 13, 2008 503 PM If you move or lift the pen before the circle is complete, the rightclick action is cancelled. This tutorial provides pen training. Entering, Editing, and Erasing T ext With the Pen The handwriting recognition softwar e make s it easy to enter te xt into your applications with the pen. Some applic ations, s uch as W ind ows Journal, allow you to write with the pen direct ly into the application window. When an application does not direct ly support pen input, you can use the T ablet PC Input P anel to enter te xt into your a pplication. If you tap in an editable area, the T ablet PC Input P a ne l icon appears. T ap the icon and the Input P anel slides out from the edge of the display. You can also open the Input P anel by tapping the Input P anel tab, which is docked at the edge of the scree n when the Input P anel is hidden. The Input P anel allows you to enter and edit te xt in different modes.

Edit text in the Input P anel using gestures, such as lining through te xt you want to delete, or tapping buttons. Erase text in the Input P anel using the erase pen button, or by lining through text you want to delete.P en flicks are quick, directional gestures; you quickly draw a short line in one of

eight directions. When a pen flick is r ecognized, the T abletPC performs the action assign ed. The default assignments f or the diagonal pen flicks are editing actions delete, copy, paste, and undo. Y ou can choose to turn pen flicks off, use the navig ational pen flicks only, or use the navigational and editing pen flicks. You can also assign a new action to any of the eight pen flicks and adjust how easily your pen flicks are r ecognized. Setting Pen Preferences Y ou can customize several pe n behaviors in the operating system to help make using your T abletPC mor e comfortable. Fo r e x a m ple, if your doubletaps are sometimes not recognized because you do not tap them fast enough, you can set a slower speed so that you have m ore time to tap. In W indows Vista, you can customize th e visual feedback that displays for each type of tap, and you can custom iz e the actions assigned to pen flicks. Setting Pointer Device Mouse Preferences P o inter device preferences, such as pointer speed, c lick speed, and pointer mouse trails, are set in the Mouse P roperties window. These preferences apply to any pointer device in the system. Using T ouch Y our T abletPC is able to distinguis h between the pen and your fingertip touch mode. When you use touch mode, a translucent image of a computer mouse, called the touch pointer, floats beneath your finger. The touch pointer has left and right mouse buttons that you can tap with your finger. You use the area beneath the buttons to drag the touch pointer. If the pen is not within range, doubletap the d isplay with your finger to enter touch mode.

To acces s the digitizer utility from the Windows Notification area and set the input mode, rightclick in W indows Vista or in W indows XP, click Pr o p e r ti e s, and then click the Digitizer Options tab. Click the radio button for the input mode you want to set, and click Apply.QuickSet NOTICE If you uninstall QuickSet from your T abletP C you will also delete the tablet button drivers. To reinstall Quic kSet and the tablet button drivers, go to support.dell.com. QuickSet gives you easy access to setti ngs and controls for customizing your T abletPC. Y ou can access Dell QuickSet from the QuickSet icon in the W indows Notification area or through the Windows Mobility C enter. Depending on what you want to do, you can start Quic kSet by either clicking, double clicking, or right clicking the QuickSet icon in the W indows Notification area. The W indows Notifica tion area is locate d in the lowerright corner of your screen. Clicking the QuickSet Icon NOTE The following features may not be available on certain computers. Control Panel T o access the Control P anel, click Start or Start in W indows XP and then click Control P anel. The Control P anel contains several categories of tasks for managing your T abletPC. Clicking each c a tegory displays more information. To display these tasks as task icons, click Switch to Classic V iew in W indows XP or Classic V iew in W indows Vista. Help and Support T o access Help and Support, click Start or Start in Windows XP and then click Help and Support. Help and Support provides information for understanding how to ma nage your T a bletPC. Windows Vista Mobility Center The Windows Mobility Center contains a set of tiles through which you can configure settings on your computer. There are additional tiles that have been customized by Dell. You can access the Windows Mobility Cent er using any of the following methods book.

book Page 72 Tues day, May 13, 2008 503 PM Click one of the tiles, such as Networking, Display Settings, or Syst em Configuration, in the Cu stomized by De ll Inc.Using a Battery CAUTION Using an incompatible battery may increase the risk of fire or explosion. Replace the battery only with a compatible battery purchased from Dell. The battery is designed to work with y our Dell T abletPC. Do not use a battery from other T abletPCs with your T abletPC. CAUTION Do not dispose of batteries with household waste. When your battery no longer holds a charge, call your loca l waste disposal or environmental agency for advice on disposing of a lithiumion battery. CAUTION Misuse of the battery may increase t he risk of fire or chemical burn. Keep the battery away from children. Handle damaged or leaking batteries with extreme care. Damaged batteries may le ak and cause personal injury or equipment damage. Battery Performance NOTE For information about the Dell warranty for your T abletPC, see the Product Information Guide or separate paper warranty documen t that shipped with your T abletPC. One battery is supplied as standard equipment in the

battery bay. book.book Page 73 Tues day, May 13, 2008 503 PM For best results, operate the T abletPC with the AC adapter until the battery is fully charged. Battery operating time varies depending on operating conditions. NOTE Battery operating time the time the battery can hold a charge decreases over time. Depending on how often the battery is used and the conditions under which it is used, you may need to purchase a new battery during the life of your T abletPC. NOTE It is recommended that you connect your T abletPC to an electrical outlet when writing to a CD or DVD. Y ou can check the battery charge befor e you insert the battery into the T abletPC. Y ou can also set power mana gement options to alert you when the battery charge is I ow.

F or more information about OuickSet, rightclick the OuickSet icon in the W indows Notification area, and click Help. Power Meter The P o wer Meter indicates the remaining battery charge. To check the P ower Meter, move your cursor over the Po w e r icon in W indows Vista and in W indows XP in the Noti fication area to display the Power icon popup. If the computer is connected to an electrical outlet, the Po w e r icon popup displays the plugged in charging messa ge. After hundreds of charge and discharge cycles, batteries lose some charge capacity—or battery health. Check the Battery Charge T o check the battery charge, pr ess and r elease the status button on the battery charge gauge to illuminate the chargelevel lights. Each light repr esents approximately 20 percent of the total battery charge. F or example, if the battery has 80 percent of its char ge remain ing, four of the lights ar e on. If no lights appear, the battery has no charge, book, book Page 75 Tues day, May 13, 2008 503 PM For information about QuickSet, rightc lick the icon in the Windows Notification area, and click Help. To check the battery health using the charge gauge, press and hold the status button on the battery charge gauge for at least 3 s econds. If no lights app ear, the battery is in good condition, and more than 80 percent of its original charge capacity remains. Each light re pr esents incremental degradation. If five lights appear, less than 60 percent of the charge capacity r emains, and you should consider r e placing the battery. LowBattery Warning NOTICE T o avoid losing or corrupting data, save your work immediately after a lowbattery warning. Then connect the T abletPC to an electrical outlet, or dock the T abletPC onto an optional battery slice. If the battery runs completely out of power, hibernate mode begins automatically. A popup window warns you when the battery char ge is approximately 90 percent depleted.

http://fscl.ru/content/ingersoll-rand-roller-manuals-0